


## When specifying an Air Cleaner ...


Determine the airflow requirements of your engine, then find the corresponding cfm airflow in the table at right. The restriction numbers (shown in inches of water) indicate the approximate initial restriction of each model air cleaner at that cfm. If there are two air cleaner models that fit your parameters, choosing the one with the lowest restriction will provide longest filter service life. When calculating total initial restriction of the entire air intake system, include the restriction caused by ducting, elbows, pre-cleaners, etc.

### Airflow Pattern "B"

Air in the side, out the end

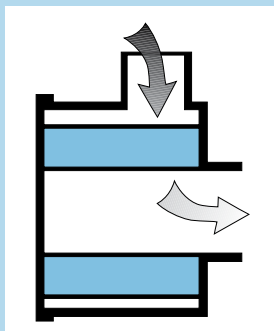


## EBB Specification Illustration

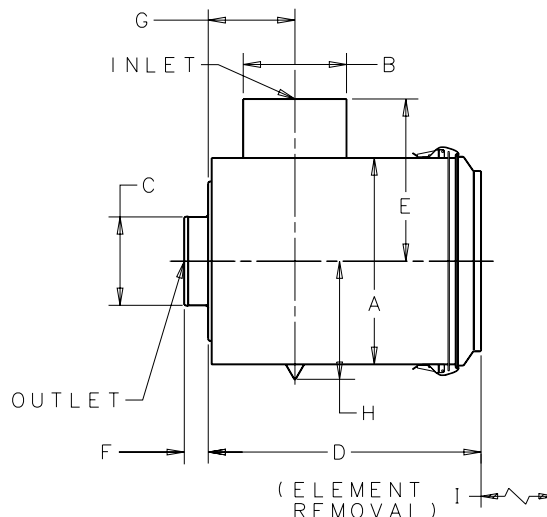

## Initial Airflow Restriction

CFM @ "H2O	Air Cleaner Model		
	6"	8"	10"
620	730	800	B120271
900	1050	1320	B140044
1360	1530	1640	B160049

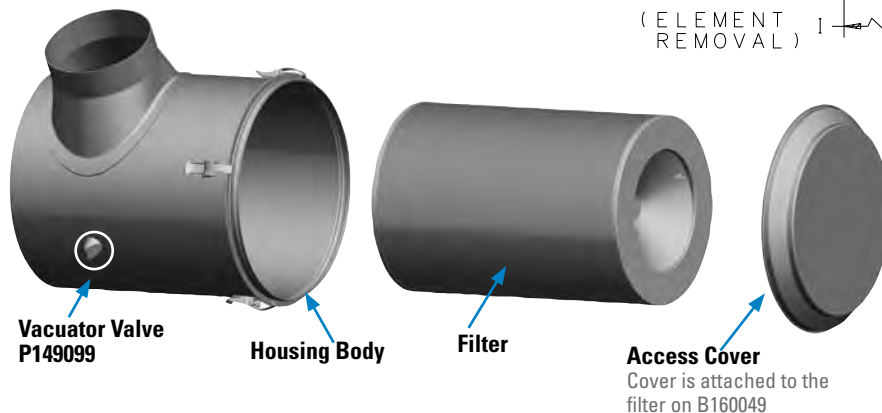

## EBB Specifications

NOTE: All EBB Air Cleaners are tapped to accept a filter service indicator

Air Cleaner Models	Body Diameter (A)		Inlet Diameter (B)		Outlet Diameter (C)		Length (D)		Length (E)		Inlet Length (F)		Length (G)		Length (H)		Service Clearance (I)		Weight	
	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	lbs	kg
B120271	11.81	300	5.50	140	5.00	127	16.42	417	7.64	194	2.00	51	5.80	147	--	--	16.0	406	16	7
B140044 <sup>1</sup>	14.00	356	7.00	178	6.00	152	18.50	470	10.90	277	1.62	41	5.88	149	8.00	203	17.5	445	19	8
B160049 <sup>2</sup>	16.00	406	8.00	203	7.00	178	18.75	476	12.91	328	2.50	64	8.84	225	--	--	18.0	457	35	16

1 - B140044 is only model with installed Vacuator Valve 2 - Bolted on access cover

## EBB Service Parts

### B120271

filter, primary - SM	.....	P181028	.....	3
filter, primary - ES & HE	.....	EAF5028	.....	
filter, primary	.....	P182028	.....	
mounting band	.....	H000349	.....	2

### B140044

filter, primary - SM	.....	P181015	.....	3
filter, primary - ES & HE	.....	EAF5015	.....	
filter, primary	.....	P182015	.....	
mounting band	.....	H000350	.....	2

### B160049

filter, primary - SM	.....	P181099	.....	6
filter, primary - ES & HE	.....	EAF5099	.....	
filter, primary	.....	P182099	.....	3,6
mounting band	.....	H000351	.....	2

### NOTES:

- 2 = Two required for proper installation
- 3 = Shipped with air cleaner initially
- 6 = Access cover is attached to filter

ES = Extended Service  
HE = High Efficiency  
SM = Scheduled Maintenance



Mounted against the firewall, this EBB air cleaner (not a catalog model) is small enough to fit under hood yet large enough to deliver plenty of clean airflow to the engine.